




**MODEL RTA - 8899**

**IMPORTANT:** Surfaces must be cleaned with a solution of a smooth soap and water, then cleared with a dry towel. Do not use solvents over surfaces or structural tubes.

Thanks for purchasing one of our products.  
Please read carefully the assembly instructions before the installation.  
Please save this manual for future reference.

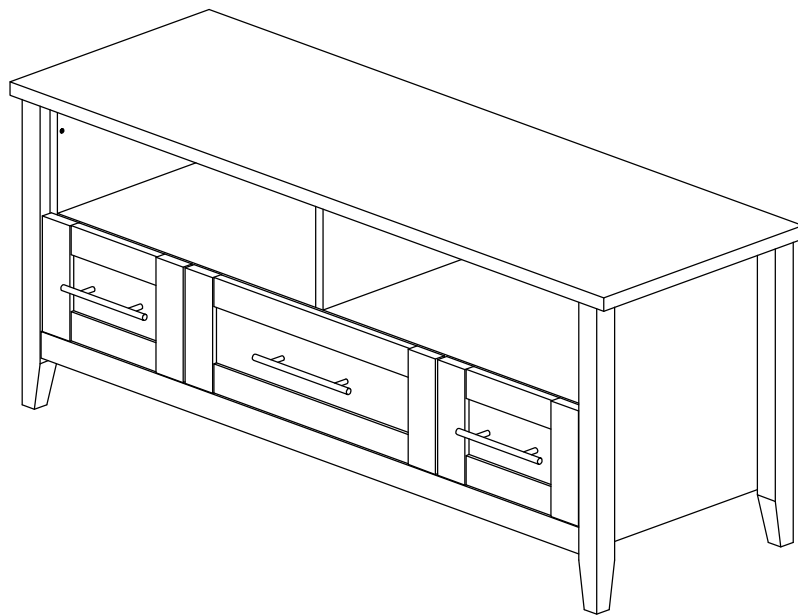


**RTA - 8899**




## CARE AND MAINTENANCE

- DO NOT EXPOSE THE SURFACES TO DIRECT SUNLIGHT, OR EXTREME ENVIRONMENTAL CONDITIONS. EXPOSURE WILL DAMAGE THE PRODUCT, WHICH IS NOT COVERED BY THE WARRANTY.
- DO NOT USE SOLVENTS OVER SURFACES OR STRUCTURAL TUBES. SURFACES MUST BE CLEANED WITH A SOLUTION OF A SMOOTH SOAP AND WATER, THEN CLEARED WITH A DRY TOWEL.
- PRODUCTS THAT ARE HEAVY SHOULD BE LIFTED OR MOVED BY AT LEAST 2 PERSONS, AND ALL OBJECTS SHOULD BE REMOVED FROM THE PRODUCT.

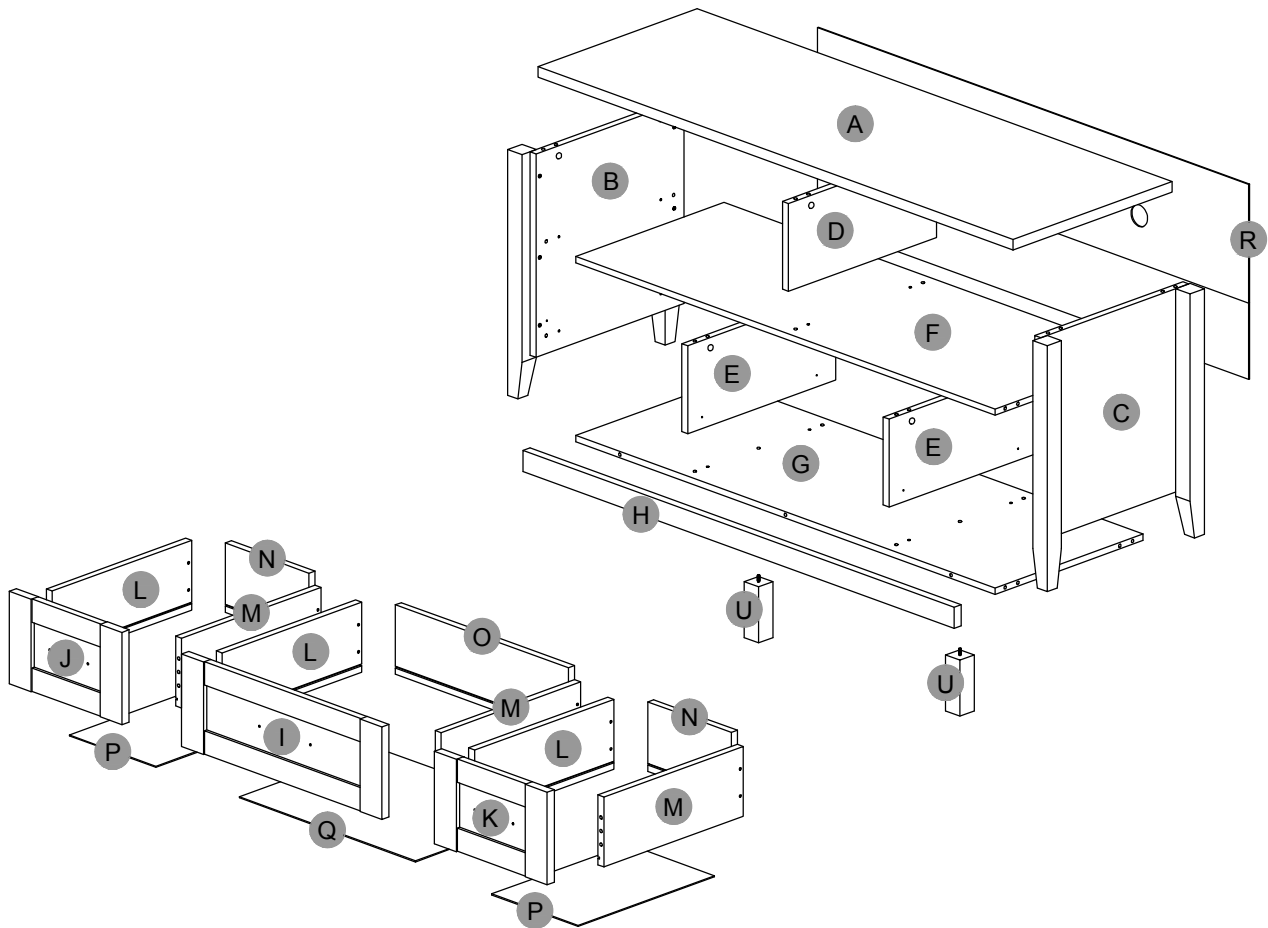

RTA - 8899

## RTA - 8899

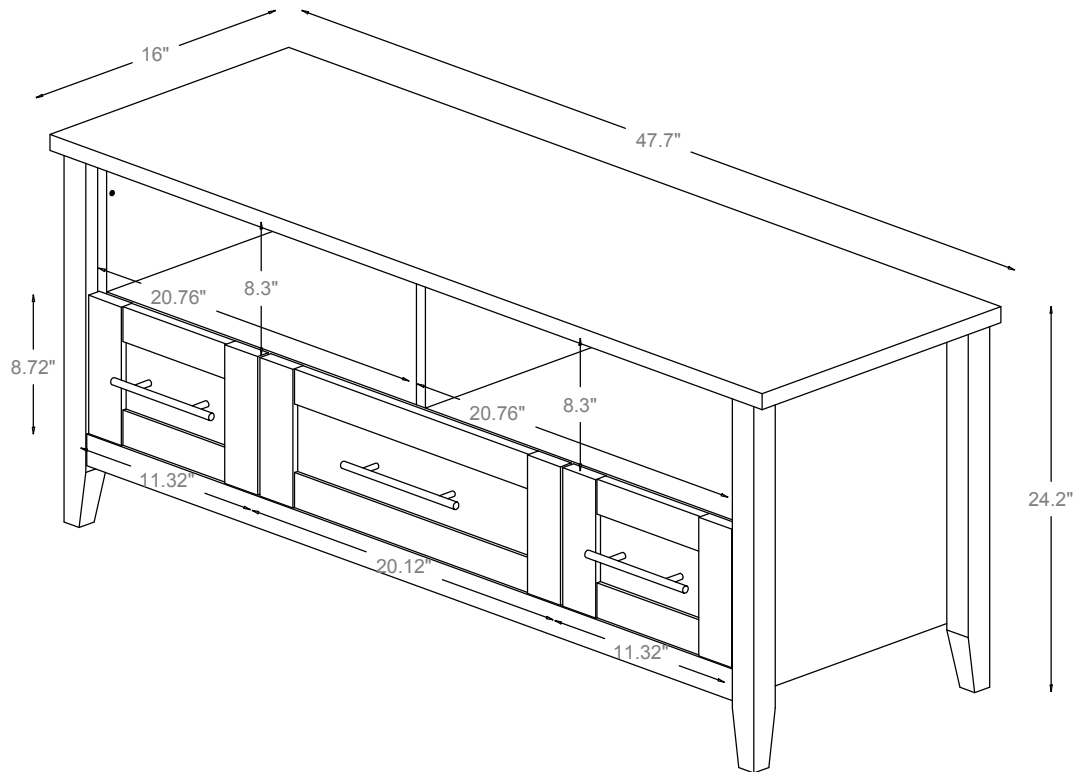

**Product Size : 47.7" W x 16" D x 24.2" H**

**TOP WEIGHT CAPACITY : 130 Lbs.**

**SHELVES WEIGHT CAPACITY : 75 Lbs.**

**DRAWER MAXIMUM WEIGHT CAPACITY : 10 LBS**

**DO NOT exceed this limit.**

**Please use care and good judgement when placing objects on wood surface.**


HELPFULL ASSEMBLY TIPS

. MAKE SURE THE PACKAGE CONTAINS ALL THE PARTS LISTED IN THE LIST OF PARTS, INCLUDING ANY HARDWARE.




PART No.	DESCRIPTION	QTY
1	FRAME	2
2	SUPPORT	2
3	BACK PANEL	1
4	GLIDE	4
5	TABLE TOP	1
A	20mm SCREW	1
B	30mm SCREW	4
C	TOOL	1


. FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.  
AND DO NOT SKIP ANY, UNLESS ADVISED TO DO SO  
BY AN RTA PRODUCT'S TECHNICIAN.

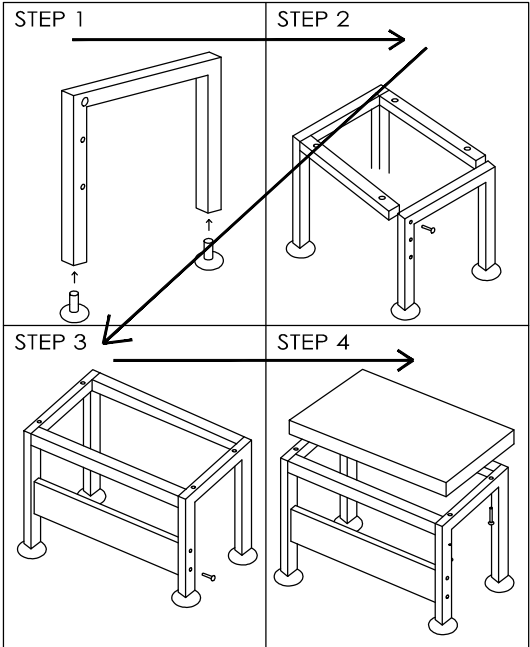


. ON EACH STEP, AND TO AVOID MISALIGNMENTS,  
ALWAYS LEAVE SCREWS LOOSE,  
AND DO NOT TIGHTEN THEM UNTIL ALL ARE IN PLACE.

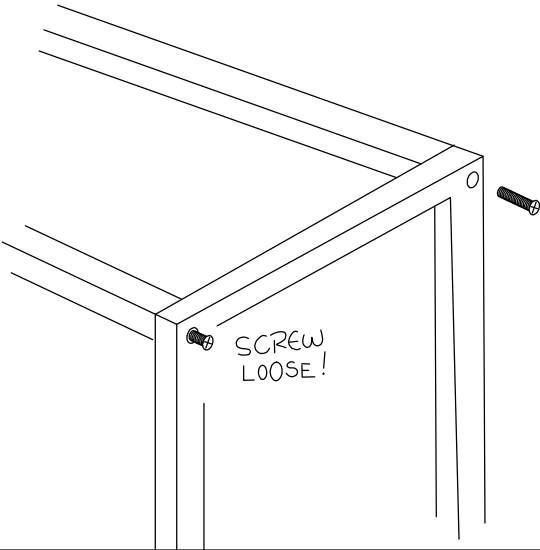


. MAKE SURE TO USE THE CORRECT SCREWS OR BOLTS  
AND DO NOT OVERTIGHT THEM.  
DOING SO MIGHT CAUSE DAMAGE TO THE PARTS  
OR PRODUCTS WHICH IS NOT  
COVERED BY THE PRODUCT'S WARRANTY.

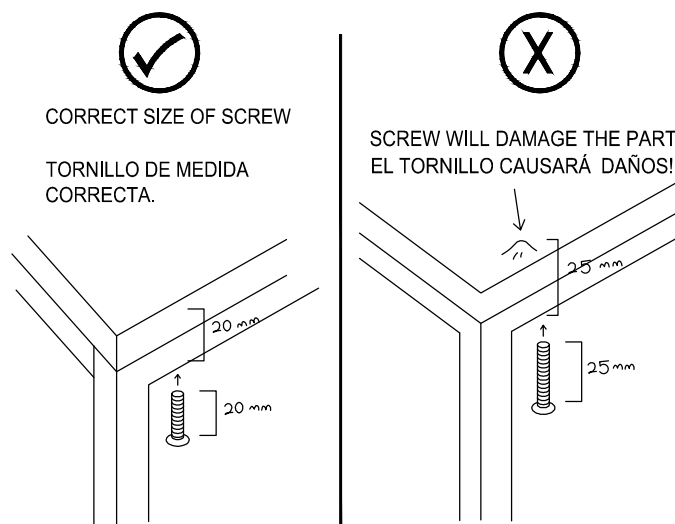

. IN SOME WOOD PANELS THE LAMINATE MIGHT BE COVERING  
THE HOLES LOOK FOR INDENTATIONS IN THE AREA WHERE  
THE HOLE SHOULD BE. IF THE HOLES LOOK TOO  
SMALL FOR A SCREW. JUST CAREFULLY PUSH THE SCREW THRU THEM.














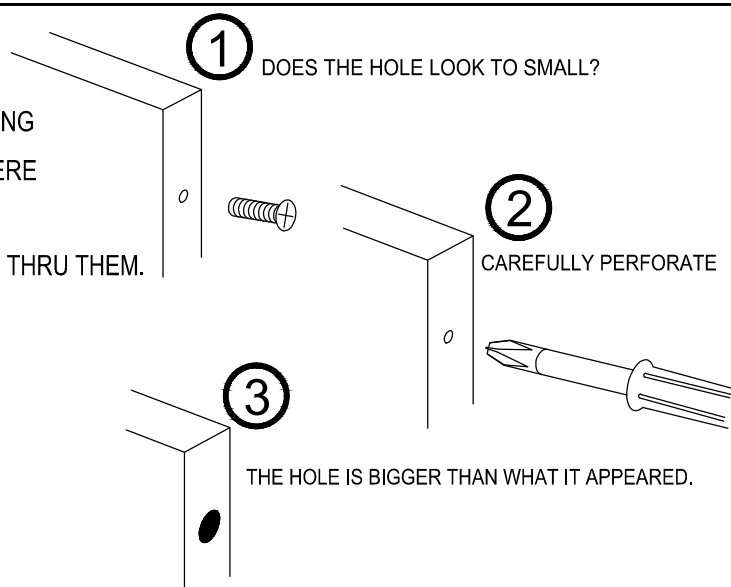



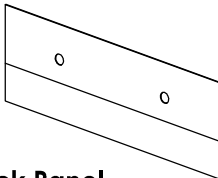



. SOME WOOD PANELS HAVE METAL INSERTS THAT LOOK  
LIKE SCREWS. THESE PARTS ARE EITHER NUTS  
OR CAM LOCKS, MAKE SURE THEY ARE ALIGNED  
TO RECEIVE THE SCREW OR BOLTS.

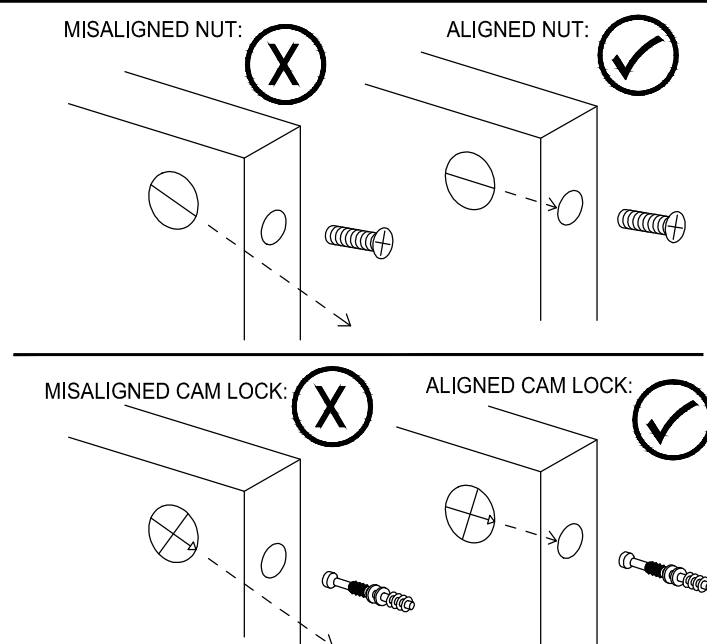






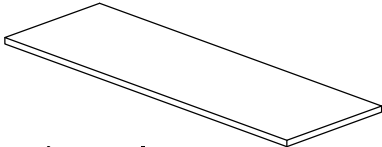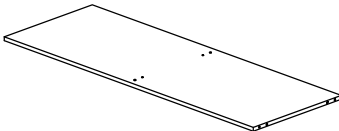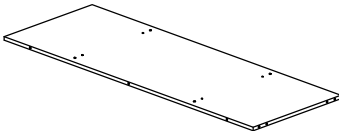



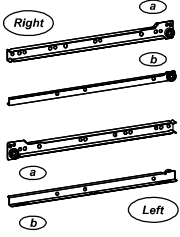






## •PARTS LIST

<div>A</div> <div></div> <div>▪ Main Panel</div>	<div>B</div> <div></div> <div>▪ Side Panel Left</div>	<div>C</div> <div></div> <div>▪ Side Panel Right</div>	<div>D</div> <div></div> <div>▪ Stand Panel Upper</div>		
<div>E</div> <div></div> <div>▪ Stand Panel Lower x 2</div>	<div>F</div> <div></div> <div>▪ Shelf Panel</div>	<div>G</div> <div></div> <div>▪ Bottom Panel</div>	<div>H</div> <div></div> <div>▪ Bottom Cross Bar</div>		
<div>I</div> <div></div> <div>▪ Drawer Front Middle</div>	<div>J</div> <div></div> <div>▪ Drawer Front Left</div>	<div>K</div> <div></div> <div>▪ Drawer Front Right</div>	<div>L</div> <div></div> <div>▪ Drawer Side Left x 3</div>	<div>M</div> <div></div> <div>▪ Drawer Side Right x 3</div>	<div>N</div> <div></div> <div>▪ Drawer Back (s) x 2</div>
<div>O</div> <div></div> <div>▪ Drawer Back (b)</div>	<div>P</div> <div></div> <div>▪ Drawer Bottom (s) x 2</div>	<div>Q</div> <div></div> <div>▪ Drawer Bottom (b)</div>	<div>R</div> <div></div> <div>▪ Back Panel</div>	<div>U</div> <div></div> <div>▪ Leg x 2</div>	

**•HARDWARE**

PART	QTY.	ITEM	
1	39Pcs	Wooden Pin	
2	12Pcs	Screw - 5 x 8mm (Euro Screw)	
3	20Pcs	Screw - 3.5 x 15mm	
4	12Pcs	Screw - 4 x 38mm	
5	6Pcs	Screw - 5 x 38mm	
6	24Sets	Cam Lock & Bolt Sets	
7	34Pcs	Nail	
8	4Pcs	L Bracket	
9	4Pcs	Plastic Feet	

PART	QTY.	ITEM	
10	3Sets	Sliders Sets	
11	1Sets	Handle Set	
12	2Sets	Handle Set	
13	2Pcs	Screw Stud	
14	6Pcs	Plastic Cap	




• Cam Bolt



• Cam Lock


■ BOLT INSTALLATION AS BELOW :

1.

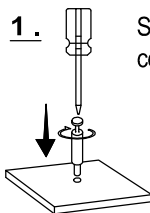


Screw bolt into the corresponding panel.

2.


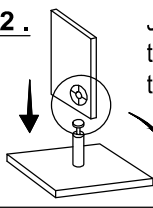


Join the panels by inserting the bolt into the hole with the cam lock.

3.

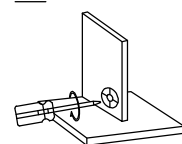

Turn the cam lock.

INCORRECT:  
Turn cam lock


CORRECT:

- Before assembling panels that use the cam bolt and cam lock, make sure that the cam lock is aligned to receive the bolt.

Attention : Holes on panels may be hidden underneath PVC laminate!!!  
Do not tighten the screws until all of them are in the right position.




1

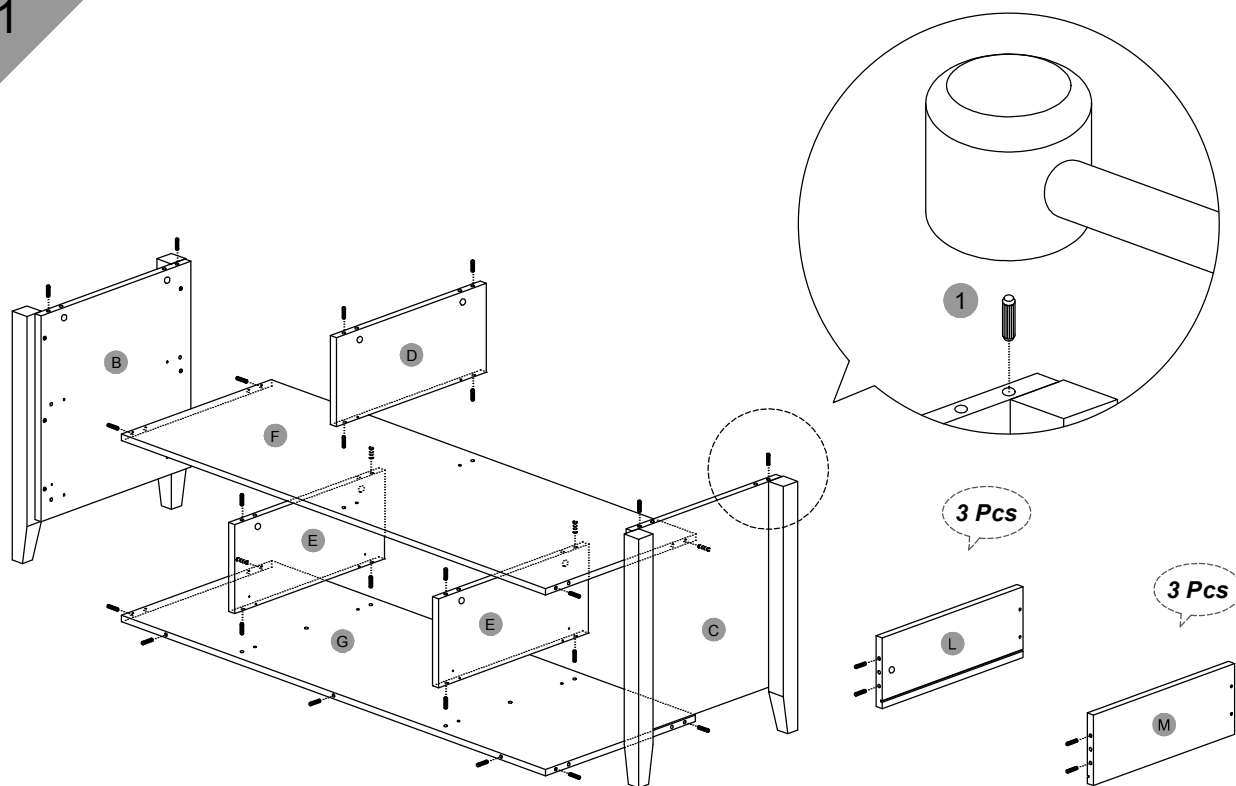

- Install 39pcs of Wooden Pins (1) into all panels as shown. Use a wooden hammer or light rubber hammer to avoid damage to the pins. Please pay close attention to which holes you have to use, and do not join any parts yet!

2

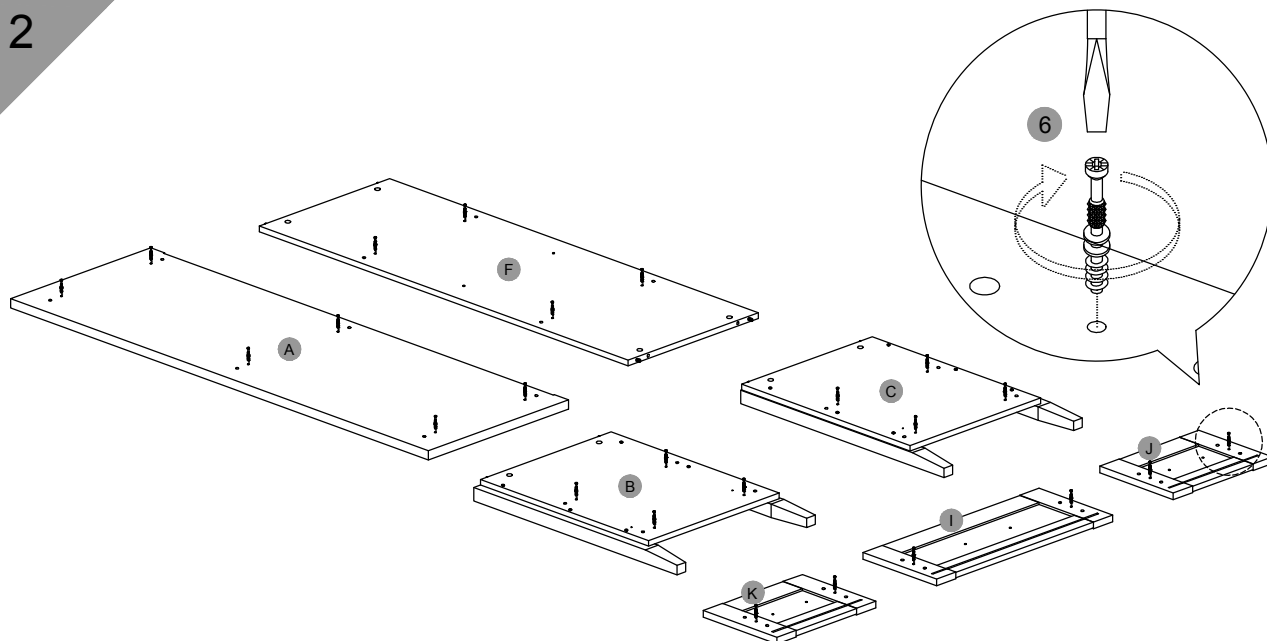


- Attach Bolt (6) to panels (A), (B), (C), (F), (I), (J) & (K) as shown above.






3

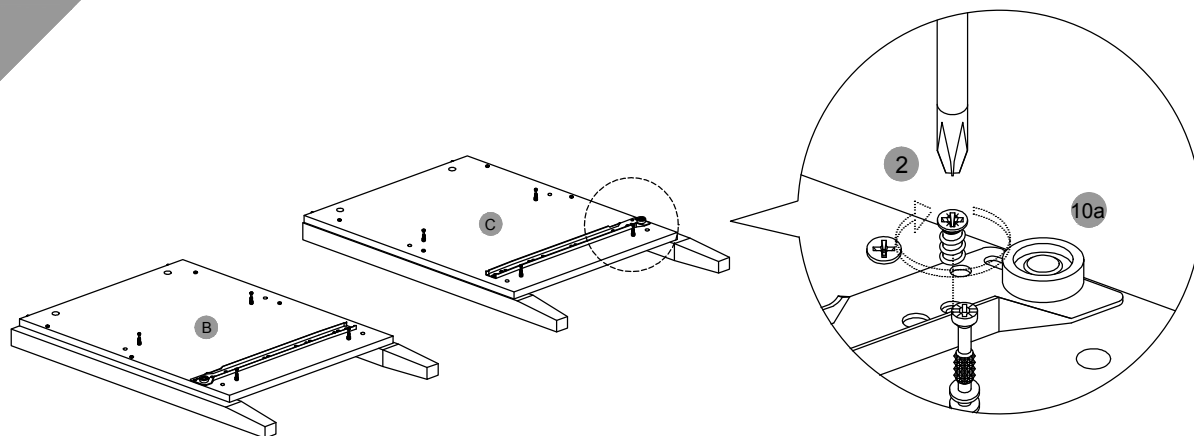


- Attach Sliders (11a) with screw (2) to both panels (B) & (C) as shown above.

4

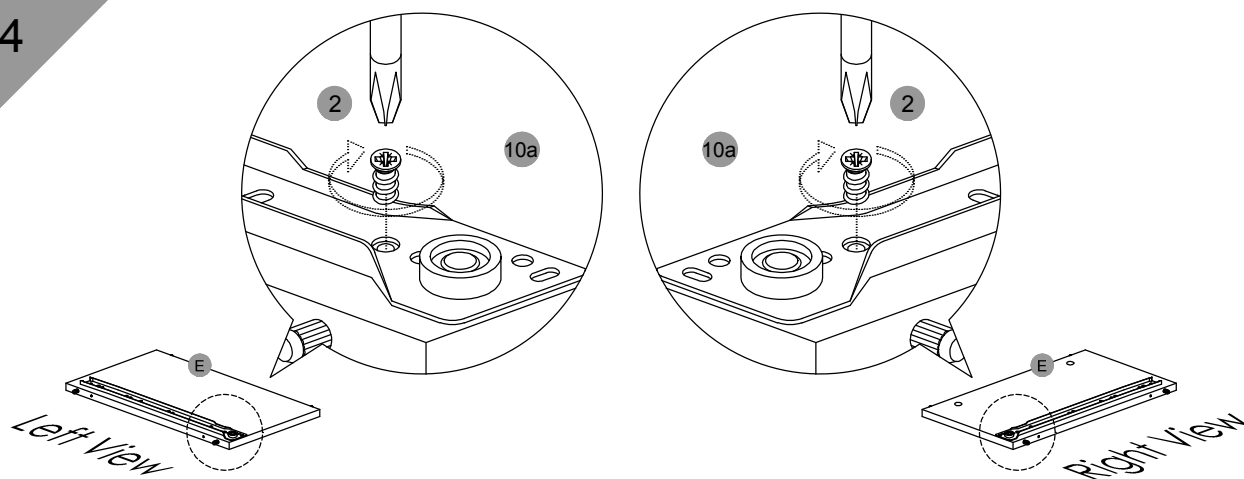

- Attach Sliders (11a) with screw (2) to both sides of panel (E) as shown above.


5

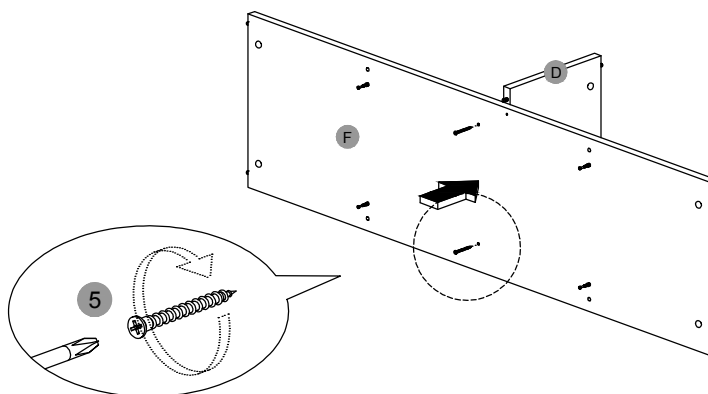

- Assemble panels (D) & (F). Secure with screw (5) as shown above.




6

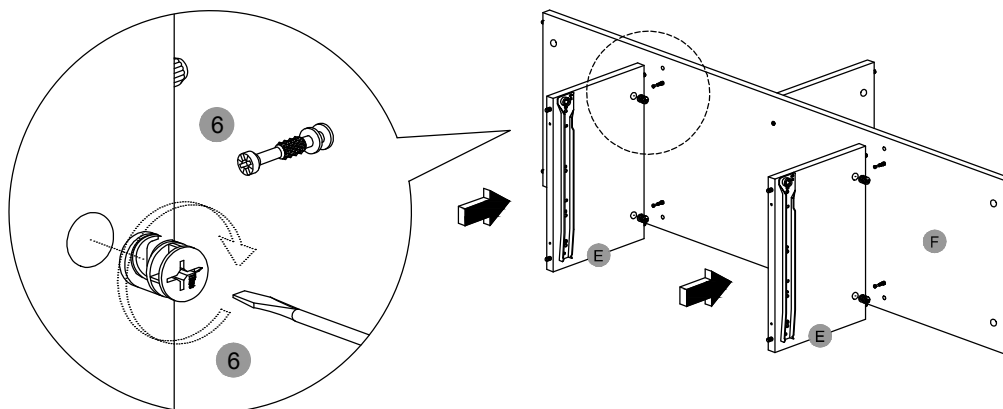


- Assemble both panels (E) to panel (F). Secure with Cam Lock (6) as shown above.

7

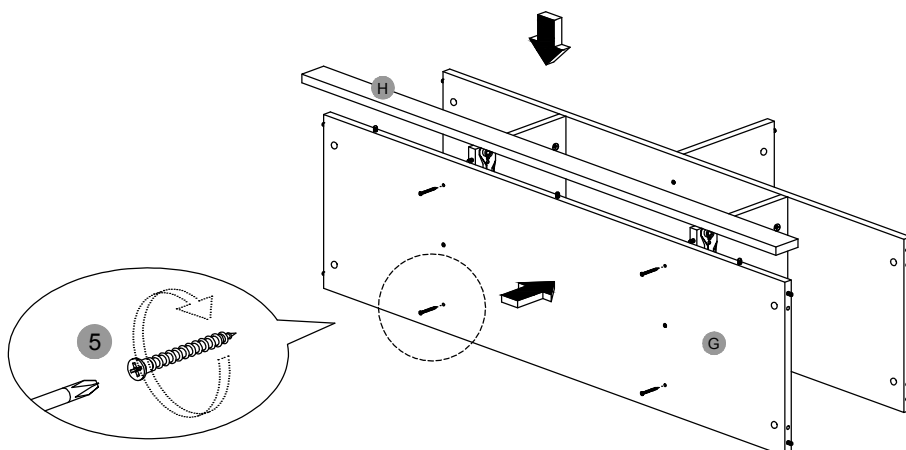

- Assemble panel (H) & panel (G). Secure panel (G) with screw (5) as shown above.


8

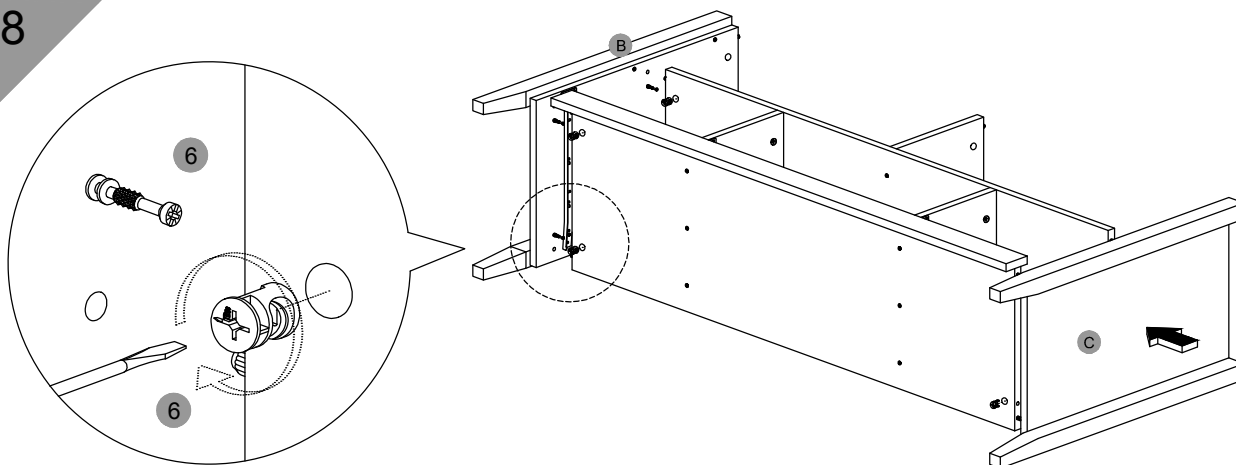

- Assemble both side panels (B) & (C). Secure with Cam Lock (6) as shown above.




9

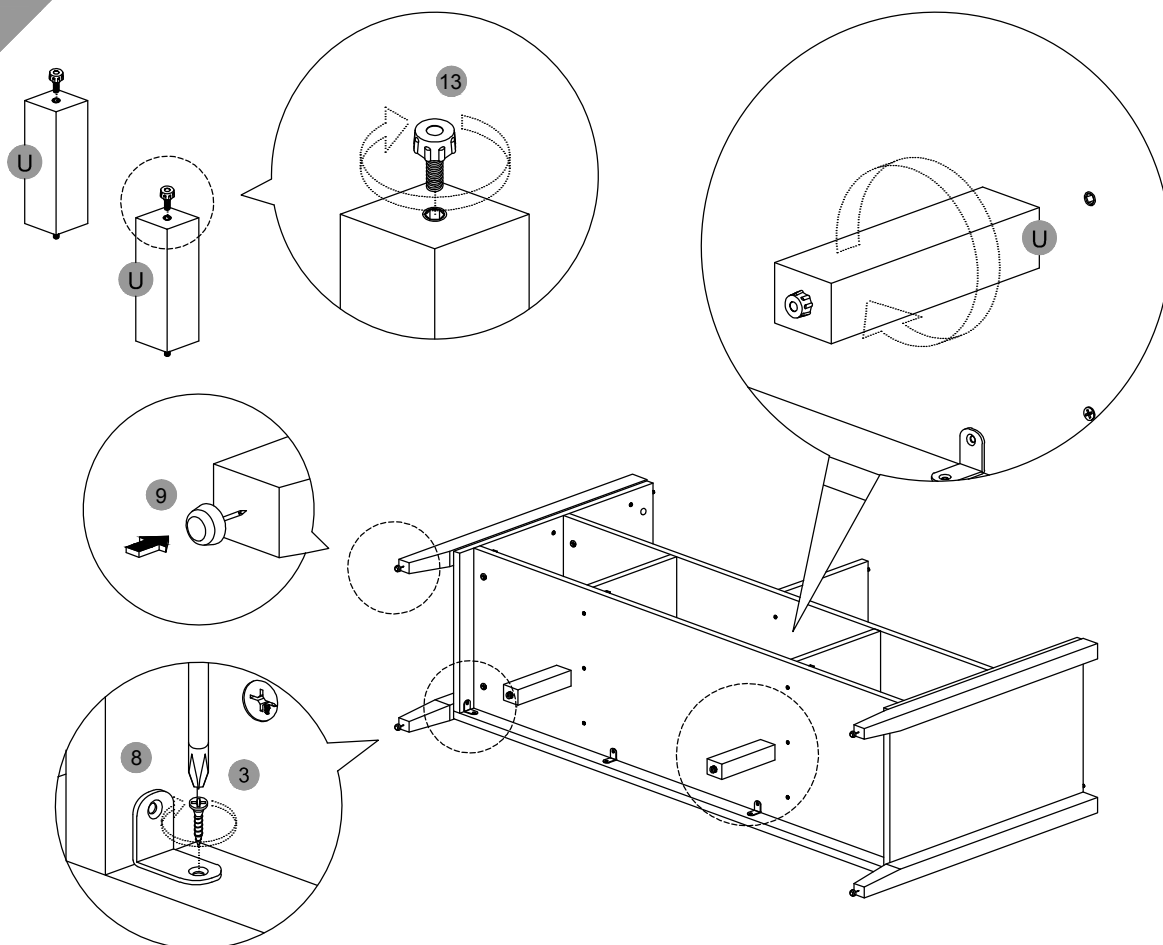

- Install Screw Stud (13) to leg (U) before assembling them to bottom panel (G) as shown. Attach Plastic Feet (10) & L Bracket (8) with screw (3) as shown above.


10

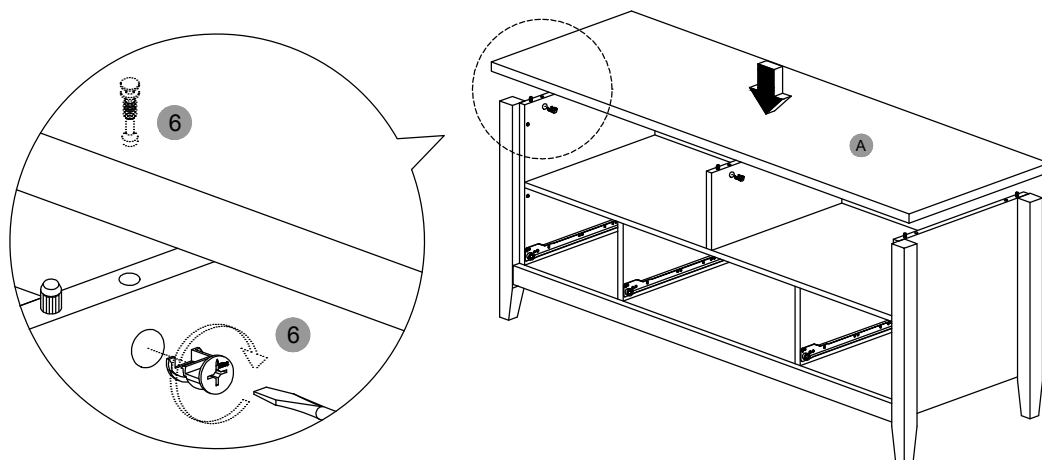

- Assemble top panel (A). Secure with Cam Lock (6) as shown above.




11

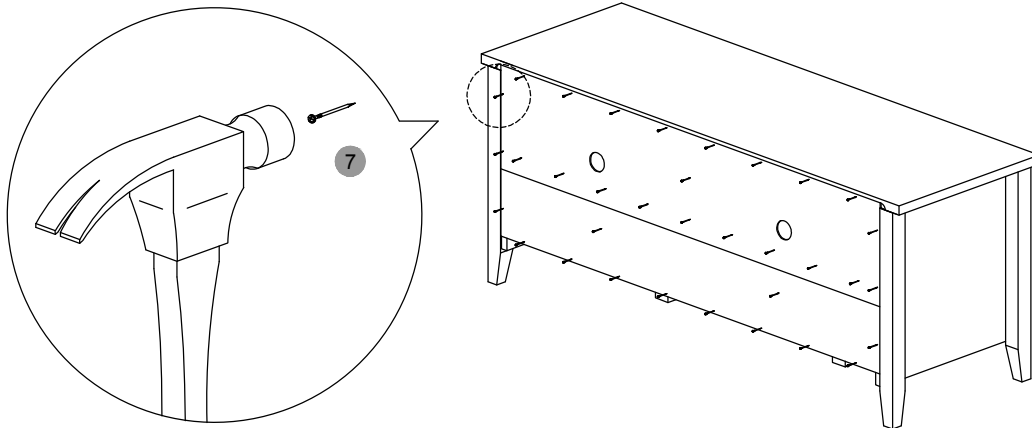


- Attach back panel (O), Secure with Nail (7) as shown above.

12

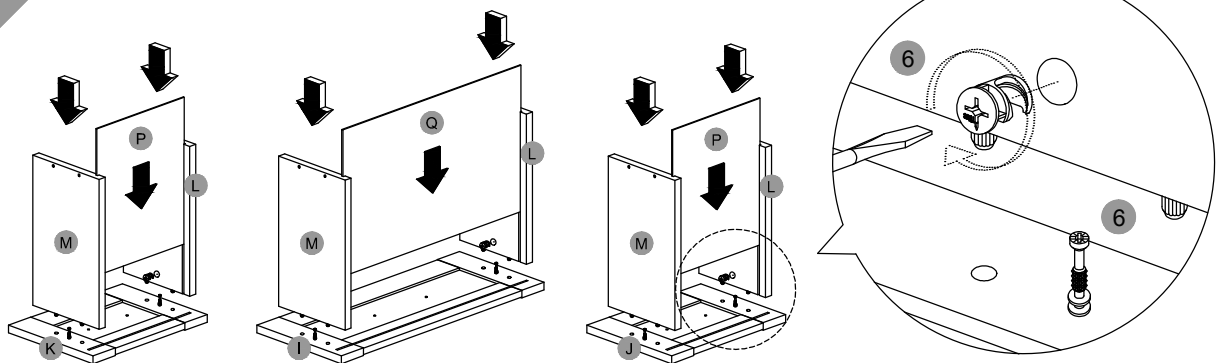

- Assemble drawer panel (I), (J), (K), (L) & (M) with Cam Lock (6). Then insert drawer bottom (P) & (Q) between drawer side panels as shown above.


13

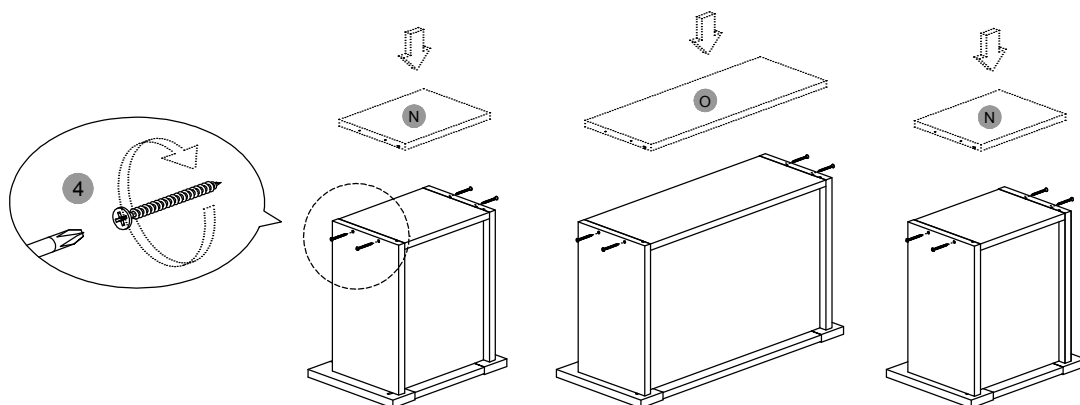

- Assemble drawer back (M) with screw (4) as shown above.




14

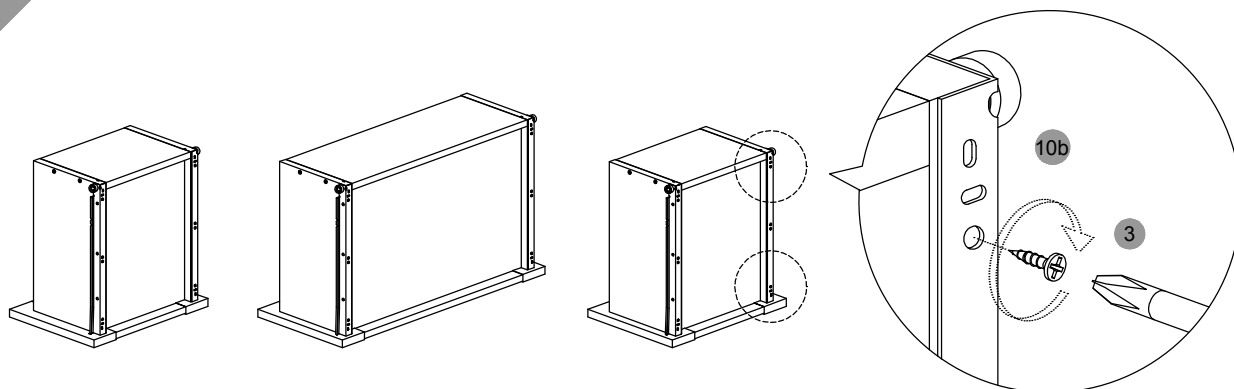


- Install slider (11b) with screw (3) as shown above.

15

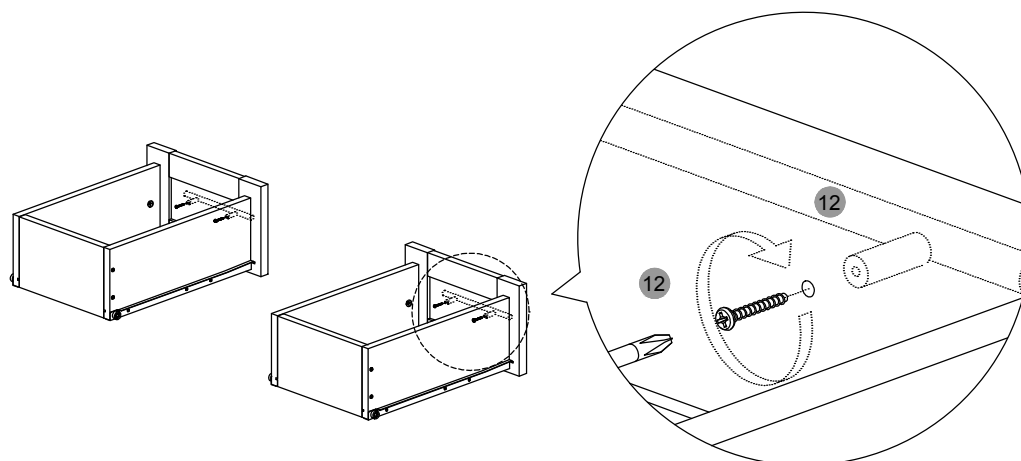

- Install Handle set (12) as shown above.


16

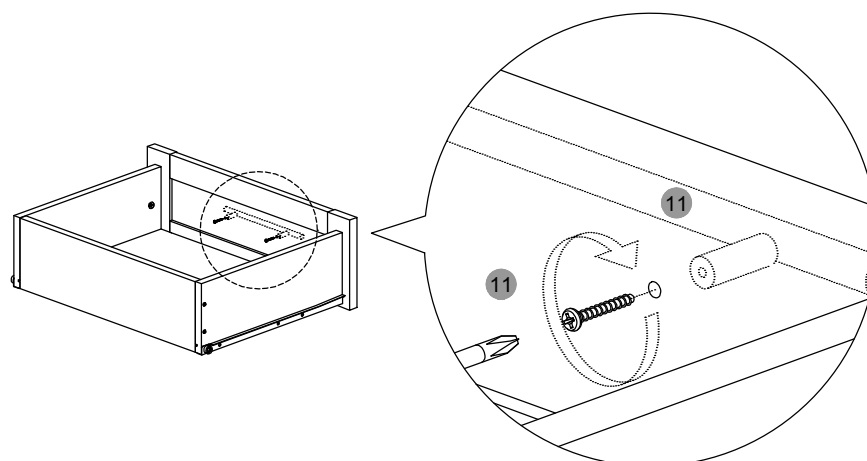

- Install Handle set (12) as shown above.




17

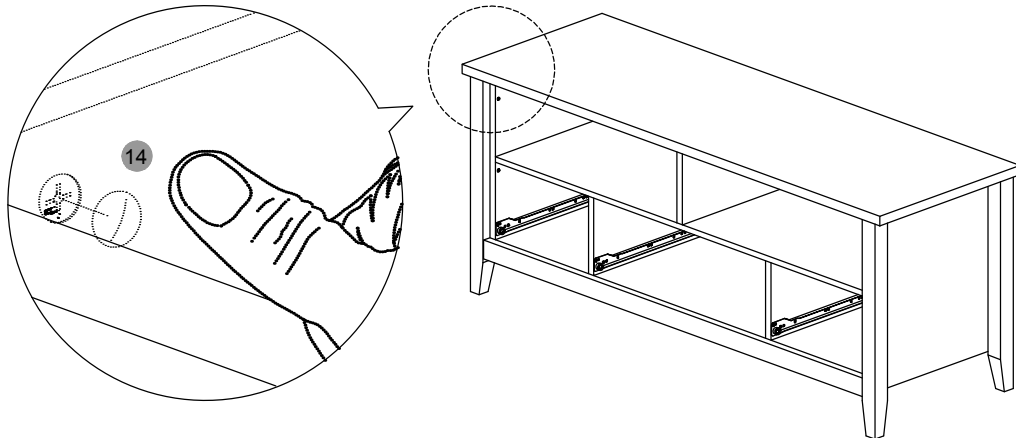


- Attach Plastic Cap (15) to side & stand panel as shown above.

18

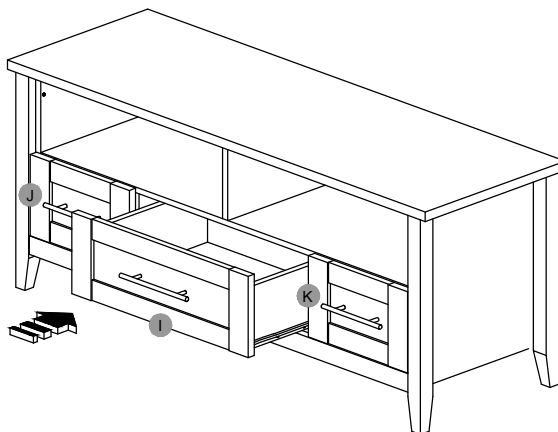

- Insert all drawers into cabinet as shown above.  
**"MAKE SURE TO INSERT DRAWER (J) ON THE LEFT & DRAWER (K) ON THE RIGHT, OTHERWISE DRAWERS WILL OVERLAP EACH OTHER."**

19

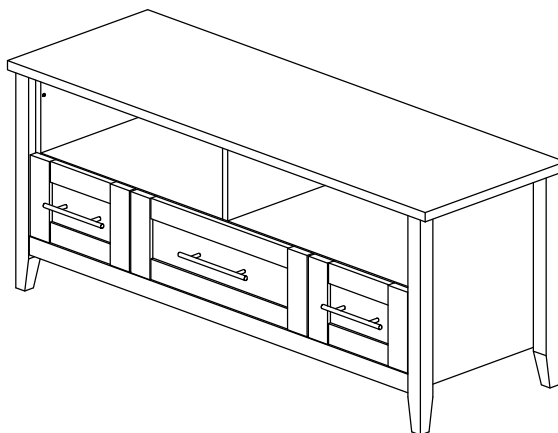

- Completed.



## **TECHNI MOBILI TV STAND WARRANTY**

### **2 YEAR WARRANTY**

RTA Products, LLC warrants to the Original Purchaser who acquired a new product from RTA Products or its authorized resellers that this product will be free from defects in its workmanship and materials, under normal use and service conditions, as described herein. "Defects" as used in this warranty, is defined as any imperfections that impair the use of the furniture or product. RTA products will repair or replace, at is option, without charge to the original purchaser 'other than freight from purchaser to RTA Products, only the defective products or parts for a period of TWO (2) Years.

Replacement parts can only be supplied if parts are available. Items out of production may be unavailable. This warranty will be effective for the applicable time period beginning the date of purchase on your original sales receipt. RTA product's obligation under this warranty is limited to repairing or replacing products or parts as provided herein. This product has been designed for and is intended for office and home-office use only. This warranty is Original Purchaser's sole remedy for product defects, and this warranty does not extend to any product, or damage to any product, caused by or attributed to abuse or misuse, products used for commercial or rental purposes, use modifications of, or attachments to the product, and products or parts not used, maintained, or extended hereunder is in lieu of any and all other warranties, express or implied, including without limitations any implied warranty or merchantability or of fitness for a particular purpose. Please note, all desks made with PVC Laminate surface should not be exposed to direct sunlight, as it may damage the material. Damage of this nature is not covered under this warranty.

RTA Products will not be responsible for indirect, special, incidental or consequential damages. This warranty is limited to merchandise purchased in the Continental United States. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights that may vary from state to state.

RTA Products will advise you of the procedure to follow in making warranty claims. The following are the procedures for warranty claims:

- a. Call us Monday – Friday, from 9am-5pm (Eastern Time) at (866) 782-8262 to explain the defect and give your name, address and phone number. Please have ready the model number of our product, date and place of purchase. You can also write to us by e-mail to [email protected] and include the same information.
- b. If we determine that replacement will remedy the situation, and in order to determine the extent or the cause of the defect, purchaser will need to send the part in question at purchaser's expense. Once we receive the part, we will examine it and determine whether the claim is valid (or not), and then proceed to send the replacement. We will ship the replacement at our expense.