




USE AND MAINTENANCE

- Use with hardware included or consult your local hardware store with information regarding your wall type to select appropriate hardware for your installation.
- Recommended 2 to 3 person installation
- Use Input Voltage of only 100-130V AC
- Only clean using a damp cloth and mild detergent, do not use bleach

LED Bathroom Mirror

PART LIST

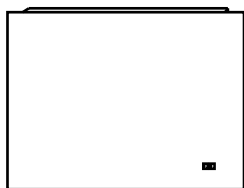

1 - Mirror

HARDWARE



2 - Anchor & Screw x4

SPECIFICATIONS

SIZES: 35.4 X 27.5 X 1.3IN
OR 31.5 X 23.6 X 1.3IN

INPUT: AC100-120v, 50/60Hz

LIGHT OUTPUT:
0-1600Lm(DIMMABLE)

COLOR TEMPERATURE:
5500K - 6000K

WATER RESISTANCE:
IP54

WEIGHT: 21 LBS

MAX POWER CONSUMPTION
54W
(Diffuse 30W, LED Strip 24W)

FEATURES

TWO TOUCH BUTTONS:



BUTTON 1
a. SHORT PRESS
- Power On/Off LED Light Strip
b. LONG PRESS
-Dim LED Light



BUTTON 2
PRESS
- Power On/Off Diffuse

INDICATOR LIGHT
BLUE - Power Off
WHITE - Power On

Installation Instructions

WALL ANCHORS COMPLETE

1. Carefully unpack the mirror from the packaging.
2. Determine how you plan to mount the mirror. The mirror can be mounted horizontal or vertically. Recommend consulting a professional electrician to install a power outlet or GFCI above bath sink or your predetermined mount location to hide power cord from view. Note: may be challenging to reset a GFCI from behind mirror. Check local building code for above sink install.
3. From the back if you select Horizontal mount than use frame holes on top and bottom for horizontal and plug in the power supply. For Vertical mount note the other holes in frame to use along the sides. Rotate the mirror into the Vertical mounting position keeping power button bottom left corner.
4. Measure and mark two wall holes 19 11/16 inches (500mm) apart. Use a level to ensure an even mirror. Drill a 2.5 inch deep hole with 1/4" (8 mm) drill bit. Repeat for second hole.
5. Place a wall anchor into each of the holes and using a hammer tap the anchor until it is snug in the wall. Insert a screw into the anchor and tighten until only 1/4 inch remains of the screw left out of the anchor. Repeat for second screw.
6. Repeat 2 additional screw holes at the bottom height of the mirror frame (depending on the mounting orientation). Insert 2 additional anchors and screws for the bottom of the mirror.
7. Using another person to assist with installation, raise the mirror and align all 4 screw heads to the holes on the back of the frame and insert the heads into the holes. Rest the screw head into the hole to secure the mirror to the wall. Connect the mirror power.
8. Congratulations! Setup of your new Naomi Home LED Bath Mirror is complete!

