MacGregor BB72
Bolt on Backboard Safety Padding
Fits Most 72" Backboards

Necessary tools for installation	Hardware included in this carton
Measuring Tape	8 each ¼" Locknuts
Masking Tape	8 each ¼" X 1" Bolts
Pencil	8 each ¼" X 3" Bolts
Center Punch	1 set pads 2 pcs. (left and right)
5/16" Drill bit	
Drill	

Step 1) Using the measuring tape, find the Horizontal Center at the bottom of the backboard and mark. Place one pad on the backboard and align the end to the center mark. Use tape to secure pad to backboard while locating holes.

Step 2) Repeat for 2nd pad on opposite side of the backboard.

Step 3) Using the pencil, mark the location of holes to be drilled. Use the holes away from the glass to avoid drilling and damaging the backboard

Step 4) Remove the tape and pads and using the center punch, mark the center of each hole to be drilled.

Step 5) Using drill and 5/16" bit drill each hole. Always clean up metal shaving to avoid damaging floor.

Step 6) Using either the 1" or the 3" Bolts (depending on the thickness of backboard) attach pads to backboard. Be certain ends are aligned with center mark on backboard.

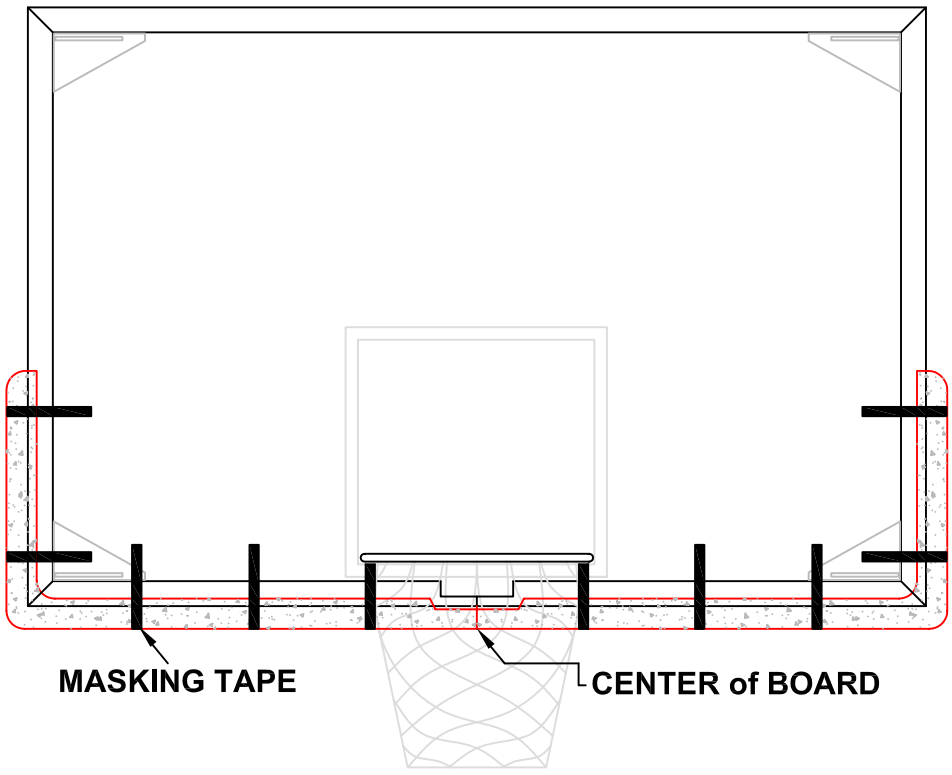
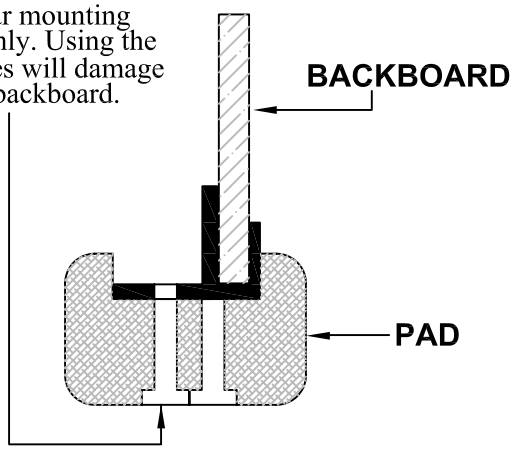
IMPORTANT
Use rear mounting holes only. Using the front holes will damage your backboard.