




If you need help or have damaged or missing parts, contact customer service at www.NaomiHome.com.

© 2018 Naomi Home, Inc. - All Rights Reserved.



i500 FOLDING ADJUSTABLE BASE

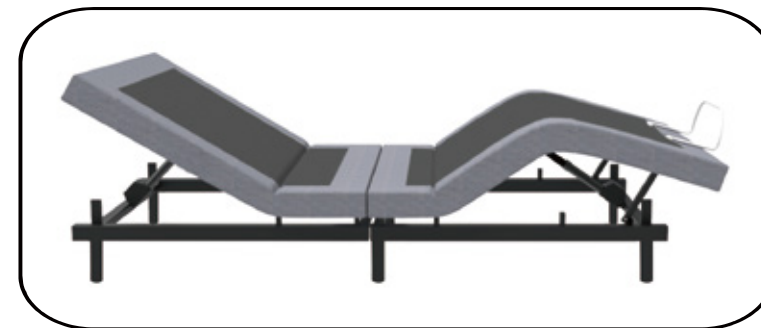

WARNINGS

IMPORTANT: PLEASE READ ALL SAFETY INSTRUCTIONS THOROUGHLY BEFORE USING THIS PRODUCT. SAVE THESE INSTRUCTIONS.

ELECTRICAL

Always connect this product to a grounded surge protector and grounded standard 120-volt circuit wall outlet. DO NOT OPERATE THIS PRODUCT WHEN ANY OF THE CORDS OR ELECTRICAL UNIT IS DAMAGED. Keep all cords away from moving parts and any heated surfaces. FOR INDOOR USE ONLY. When moving or cleaning this product, turn off all electrical functions prior to unplugging from wall outlet.

SMALL CHILDREN/PETS

Immediately dispose of all packaging materials as soon as the product is unpacked. DO NOT ALLOW CHILDREN OR PETS TO PLAY ON OR UNDER THE BED. CHILDREN SHOULD NOT OPERATE THIS PRODUCT WITHOUT ADULT SUPERVISION.

PACEMAKERS

Some pacemakers may falsely interpret the optional massage feature's vibration as movement/exercise. Please consult a physician prior to using the massage functionality.

IN-HOME USE / HOSPITAL DISCLAIMER

This product is designed solely for in-home use. This product is not designed to use as a hospital bed and does not meet hospital standards. Do not use with oxygen equipment or near explosive/flammable gases.

WEIGHT RESTRICTIONS

Recommended weight restrictions for i500 folding adjustable bases:
(all weights include the weight of the mattress and bedding)

Weight Capacity: 850 lbs

This product will support the recommended weight limits when weight is distributed evenly across the base. This product is not designed to support or lift this amount in the head or foot sections alone. Consumers should not enter or exit the bed when any portion of it is in the raise position. Do not sit on the head or foot sections while in the raised position. Exceeding the recommended weight restrictions or other misuse of this product could damage the bed and void the warranty.

SOUND

The massage function will inherently emit an audible tone during operation. The volume of this tone is directly related to the location and environment. For example, a bed placed on wood flooring may result in a more audible tone than if placed on carpet.

PRODUCT RATINGS

IMPORTANT: USE THIS PRODUCT ONLY AS DESCRIBED IN THESE INSTRUCTIONS. DO NOT MODIFY ANY PARTS OR COMPONENTS.

MOTOR RATINGS

The i500 folding motors are not designed to operate for more than two (2) continuous minutes within an eighteen (18) minute time period. Exceeding this rating will shorten the life of the motors, and will void the warranty.

POWER RATINGS

INPUT: AC 100-240V-50/60HZ, 1.5 Amp

OUTPUT: DC 29V-2A

FUSE: 1.5A 250V

If a short circuit should occur, unplug the product from the wall outlet. The customer should seek professional assistance from a licensed electrician. DO NOT open any motor compartment, alter the wiring, modify the base, or change the product in any way as it will void the warranty.

FCC COMPLIANCE

Operates on 2.4 GHz frequency transmitter.











This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

To comply with the FCC RF exposure requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirement and void users right to operate the device.

For any questions or concerns regarding this product please contact  directly:

www.NaomiHome.com.

CONTENTS

	Overview	01 - 02
	Assembly	03 - 10
	Remote Control	11 - 18
	APP Instructions	19 - 20
	Massage	21 - 22
	Electric Components Setup	23 - 26
	Emergency Backup Battery	27 - 28
	Test All Functions	29 - 30
	Warranty / Electric Components	31 - 32
	Additional Help	33 - 34








OVERVIEW



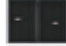



Step 1

Place the bed box in a desired location with the top of the box facing up.

Step 2





Before discarding the packing materials, check to make sure all parts are included. All electronics and components are located in boxes under the base or attached to the frame.

A	Bed Base		1 pc
B	Retainer Bar		1 pc
C	Transformer		1 pc
D	Wireless Remote Control		1 pc
E	Washer		6 pcs
F	Short Leg		6 pcs
G	Long Leg		6 pcs

H	Power Cord		1 pc
I	AAA Battery		3 pcs
J	Connecting Plate		2 pcs
K	Connecting Bolt		4 pcs
L	13mm Wrench		1 pc
M	Sync Cable (Twin XL Only)		1 pc

ASSEMBLY

Contents:

A	Bed Base		1 pc
J	Connecting Plate		2 pcs
K	Connecting Bolt		4 pcs
L	13mm Wrench		1 pc

Step 1

Unfold the base to flat position. Refer to image (i)/ (ii).

Step 2

Align the holes of the connecting plates (J) and the bed base, secure by tightening the bolts (K) with the wrench (L). Refer to image (i).


i



ii





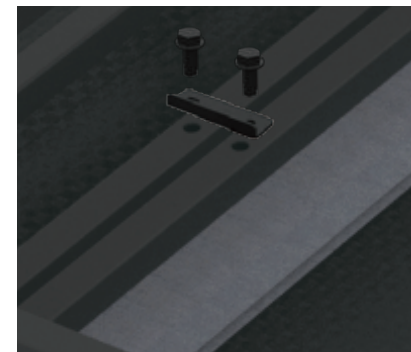

iii



ASSEMBLY

Contents:


A	Bed Base		1 pc
E	Washer		6 pcs
F	Short Leg		6 pcs
G	Long Leg		6 pcs

Step 3

Place Washer (E) on Short Leg (F) and connect to Bed Base (A). Then connect Long Leg (L) to Short Leg (G). Refer to image (i).

Note: Short Leg (F) can be omitted to accommodate lower profile beds

i

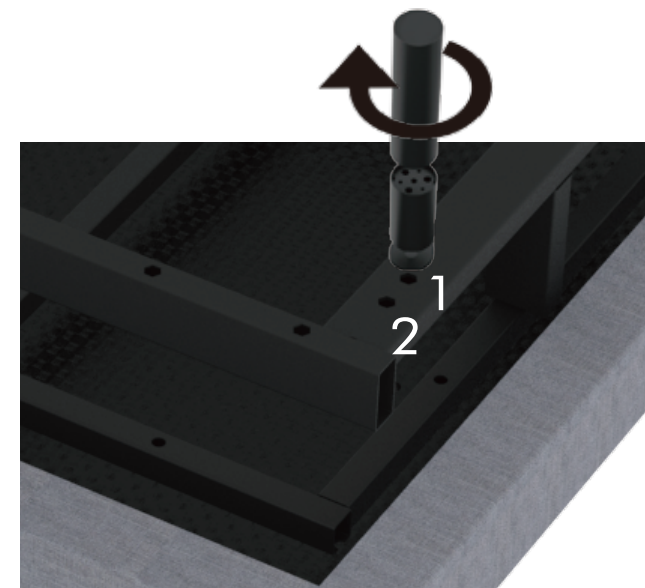

ASSEMBLY

Contents:

A	Bed Base	1 pc
C	Transformer	1 pc
H	Power Cord	1 pc

Step 4

Insert power cord located on Bed Base (A) into Transformer (C). Refer to image (i).


Step 5

Insert Power Cord (H) into Transformer (C). Refer to image (ii).

i



ii

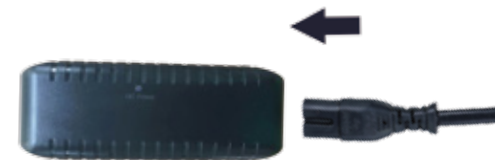

ASSEMBLY

Contents:

A Bed base 1pc



B Retainer Bar 1pc



Step 1

Turn over the whole base with legs standing on the floor. Hold the metal frame when turning over the base, do not hold the plywood only.

Step 2



Insert the retainer bar (B) into 2 holes on the foot end of Bed Base (A). (Refer to image i) .

i



REMOTE CONTROL

Contents:

D	Wireless Remote Control		1 pc
I	AAA Battery		3 pcs


Overview

All function of the bed can be operated with the Remote Control (D). The Remote Control (I) comes with programmable buttons with pre-set positions. Refer to image (i) for a complete list of remote control functions.

Remote Control Battery Installation:

Remove the battery cover on the backside of Remote Control (D). Insert the AAA Batteries (I). Refer to image (ii).

i

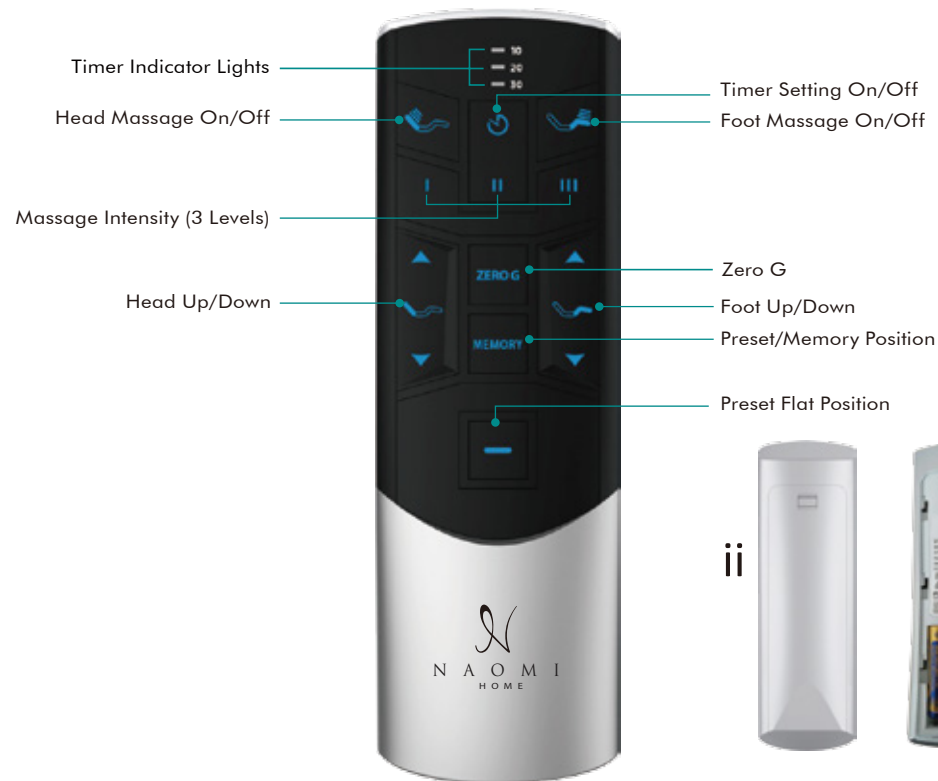

ii





REMOTE CONTROL

Custom Programming Preset Buttons:

The **MEMORY** (MEMORY) and **ZERO G** (ZERO G) buttons shown in the adjacent diagram can be custom programmed to any position of your choosing.

To program the remote preset buttons:

1. Adjust the bed to the desired position
2. Press and hold the  (Timer Setting On/Off) button for approximately three (3) seconds until the LED light starts flashing.
3. Release the  (Timer Setting On/Off) button and within one (1) second press the **MEMORY** (MEMORY) or **ZERO G** (ZERO G) button. The LED light will stop flashing and the selected button is updated to the new position.




Timer Setting On/Off

ZERO G

MEMORY



FLAT

NOTE:

The **ZERO G** (ZERO G) and  (FLAT) buttons shown to the left are pre-programmed with the manufacturer's suggested bed positions. No programming is necessary by the user unless modified positions are desired.

REMOTE CONTROL

Contents:

D	Wireless Remote Control		1 pc
H	Power Cord		1 pc

Pairing Set Up

1. Insert Power Cord (H) into wall outlet. Refer to image (i).
2. Press and hold the ▲ (Head Up) and ▲ (Foot Up) buttons simultaneously. Once the blue light on Remote Control (J) starts flashing, release the two buttons. Refer to image (ii).
3. The light will continue flashing until a successful sync with the control box is achieved.
4. If the remote does not sync, check the remote control batteries and repeat the process.

i



ii



Head Up & Foot Up Buttons

REMOTE CONTROL

Contents:

A Bed Base  1 pc

M Sync Cable (Twin XL Only)  1 pc

Setting Up Two Bases

1. Unplug base from power source.
2. Connect the Sync Cable (M) via "Synchro Cntl" input on control box for both Bed Base (A). Refer to image (i).
3. Once synced, switch the toggle key to "L" position to control the left bed and "R" position to control the right bed. Switch toggle key to "-" position to control both beds simultaneously. Refer to image (ii).

NOTE: For single beds, "R" position will have no functionality. Switch to "L" and "-" to operate the bed.



APP INSTRUCTIONS

Step 1

Download the  application.

Step 2

Enable the Bluetooth function of mobile device and open the  app. Refer to image (i).

Step 3

Press  and choose the 500i series. Refer to image (ii). Locate your bed base on the device list. Refer to image (iii).

Step 4


Once a device is chosen, the app will depict a fully functional digital representation of your physical remote. Refer to image (iv).

The app also includes an alarm clock: Press  . Refer to image (v).



MASSAGE


Massage Function:

To activate the head massage function, press the  (Head Massage On/Off) button once.
To turn off head massage, press the same button again.

To activate the foot massage function, press the  (Foot Massage On/Off) button once.
To turn off foot massage, press the same button again.

To adjust the massage intensity, press the massage intensity button: I, II, III.

Massage Timer:

Press the  (Timer Setting On/Off) button to select a 10, 20, or 30 minute massage.
Press a fourth time to turn the massage timer off. The blue light on the top of the remote will flash once indicating which timer setting is activated. Massage will automatically turn off after 10 minutes if timer is not set.

NOTE: Allow the massaging system to rest for 30 minutes between sessions.




ELECTRIC COMPONENT SETUP

USB Ports

USB ports are located under the head portion of the bed base at two (2) locations. Refer to image (i).

To access the USB ports, press the ▲ (Head Up) button to raise the bed to reveal the USB ports. Once your device is plugged into the USB port, you may lower or adjust the bed to your preference.

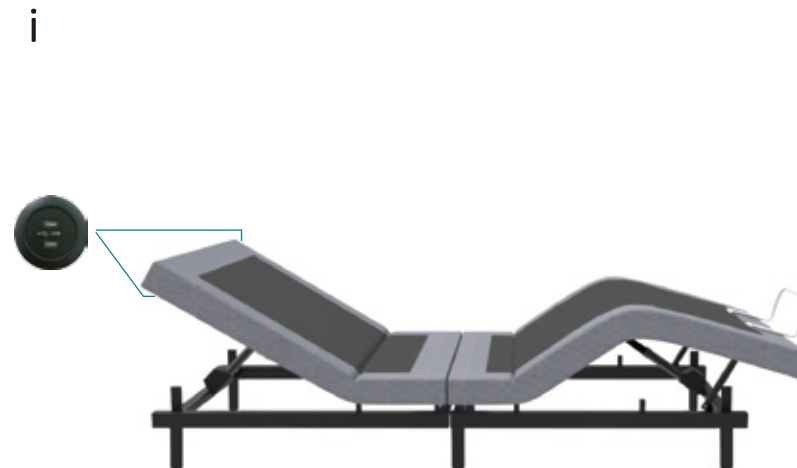

ELECTRIC COMPONENT SETUP


Overview

The electronic components are pre-installed and no assembly is necessary. However, some input locations are important for proper set up and functionality. Refer to image (i) and (ii) to familiarize yourself for proper setting and part locations.

i



ii

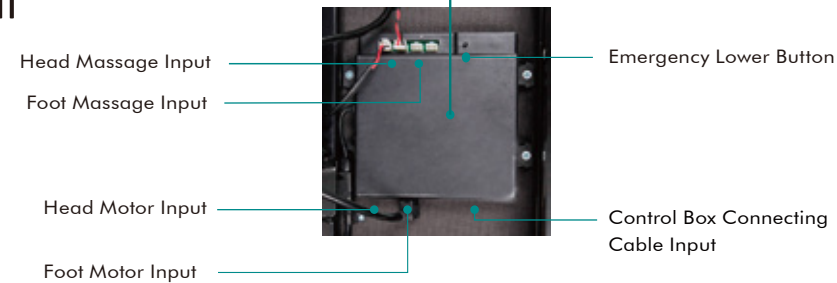

EMERGENCY BACKUP BATTERY

Contents:

C	Transformer		1 pc
H	Power Cord		1 pc

Step 1

Remove Power Cord (H) from wall outlet.

Step 2

Open the battery cover located on the backside of Transformer (C), insert two (2) 9V batteries (not included). Refer to image (i/ii/iii).

Note: the emergency backup battery is only to be used in case of a power outage, it's not to be used for normal operation of the bed.

i



ii



iii



TEST ALL FUNCTIONS

Overview

To ensure proper setup, use remote and test all functions for three (3) seconds.


- ☐ Head Motor
- ☐ Foot Motor
- ☐ Head Massage
- ☐ Foot Massage
- ☐ Massage Intensity
- ☐ Zero Gravity
- ☐ Memory
- ☐ Flat
- ☐ USB Charger
- ☐ APP



WARRANTY

Electric Components

1- Year Full Warranty

 will replace the electric components when electric components fail during the 1st year from the date of purchase to the original purchaser.

2-5 Year Warranty










During the 2nd and 5th year from the date of purchase,  will provide replacement electronic components in the event they fail. The purchaser will be responsible to pay for the cost of components.

Bed Frame

20 - Year Warranty

 provides 20 - Year full warranty on the bed frame from the date of purchase to the original purchaser.

ELECTRIC COMPONENTS

a	Head Motor		1 pc	f	Power Cord		1 pc
b	Foot Motor		1 pc	g	USB Port		2 pcs
c	Remote Control		1 pc	h	USB Controller		1 pc
d	Transformer		1 pc	i	Massage Vibrator		2 pcs
e	Control Box		1 pc				

ADDITIONAL HELP

If one or more functions of the bed have stopped working:

Check under the bed base to verify the wired connections are secure and there are no cords or bedding obstructing the movement of the base.

The remote control wont operate the bed functions:

Make sure the remote control is plugged in completely to the input location underneath the bed. Ensure that the power cord is properly connected and that the power cord is plugged into the wall outlet.

No functions of the bed will operate:

Check to ensure the power cord is properly connected.
Unplug the base for 1 hour to reset the electronic components.
Plug base into a different electrical outlet, or test current outlet with another working appliance. A grounded electrical surge protector is recommended with use of this product.

For further assistance contact us at : www.NaomiHome.com.

ASSEMBLY COMPLETE



CONGRATULATIONS, YOUR NAOMI HOME [PRODUCT NAME] IS COMPLETE!



Product Packaging Information

Model #: i500 Folding Adjustable Base

Color: Black and Gray

Shipment Ref. #: _____

Date: _____